
THONK SYNTH T11 MX4

MX4 is a four-channel utility mixer for audio and CV signals. Each channel offers up to 1.5x gain, with channels ***C*** & ***D*** each featuring polarity inversion switches. Flexible routing allows it to function as either a four-channel mixer (all channels to one output) or two independent two-channel mixers (***A+C*** and ***B+D*** to separate outputs).

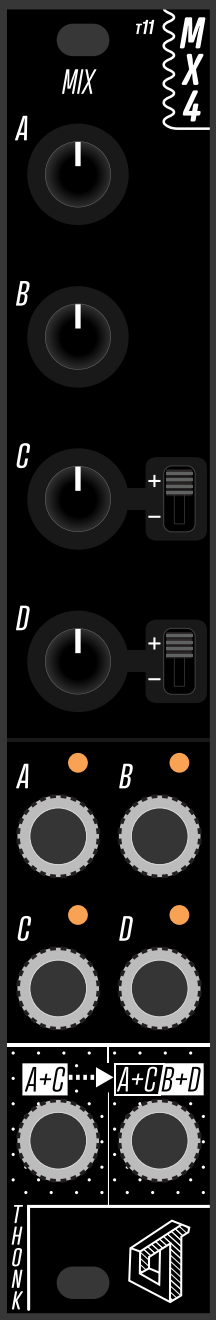

LEVEL CONTROLS
Individual level controls for inputs ***A***, ***B***, ***C*** & ***D***, with up to 1.5x gain.

INVERT SWITCHES
These switches allow you to invert the polarity of channels ***C*** & ***D***.

LEVEL INDICATORS
These LEDs show the 'post-fader' level of each channel.

CHANNEL INPUTS

OUTPUT A+C
Contains a mix of channels ***A+C***. When you patch from this output, it removes channels ***A+C*** from the main output.

OUTPUT A+C+B+D
Contains a mix of all four channels. When you patch out of the ***A+C*** output, this output only contains channels ***B+D***.

SPECS
Width 4HP
Depth 25mm (inc. power connector)
+12V 11mA
-12V 9mA
+5V 0mA

MODULE INSTALLATION
1. Ensure your Eurorack system is powered off.
2. Locate the red stripe on the included power cable, and plug the 10 pin-connector onto the power connector on the back of the module, making sure the red stripe lines up with the "**RED**" text on the back of the module.
3. Plug the other 16-pin end of the power cable into your busboard, double checking tht the orientation is correct.
4. Screw the module into the rails using the included mounting screws.
5. Turn on your Eurorack system and start mixing!