


## Using brass adaptors with D-shaft pots

1. Take a regular household matchstick

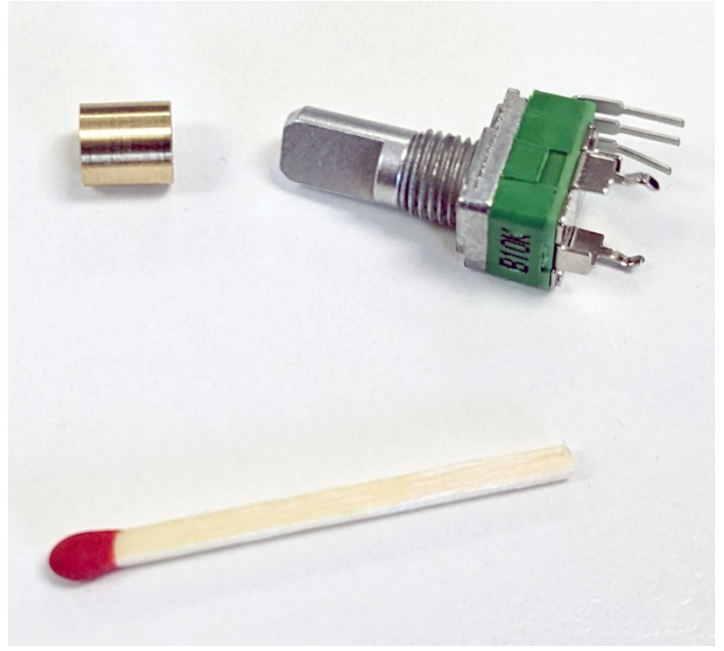

2. Cut the match in half with a pair of scissors or sidecutters




3. Insert the two halves of matchstick into the void.



## Using brass adaptors with D-shaft pots

4. Cut the excess length of match with scissors or sidecutters.

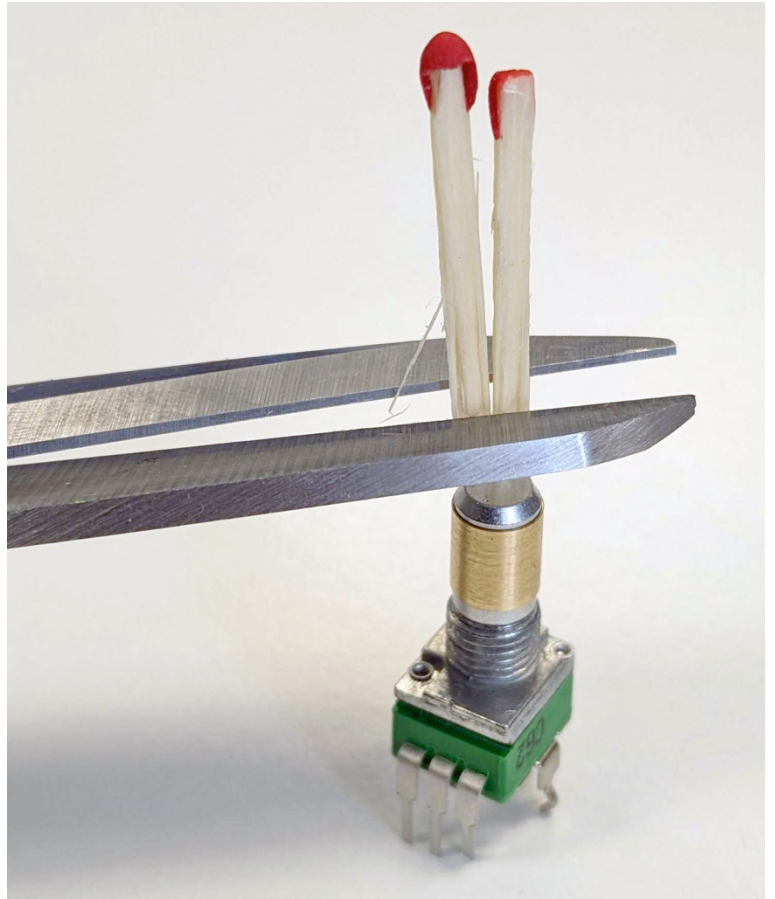

2. You can now screw on a 6.35mm knob without the brass adaptor buckling.

