

D6 (circled) is intentionally left bare


Shrouded power header slot faces inwards

Mind polarity of IC chips, transistors, voltage reg. and trimmers

NOTE: polarity is vital for all buttons! See Kassutronics build doc for details

Thonk kits don't require any washers under the

> Long LED legs go to plus symbol

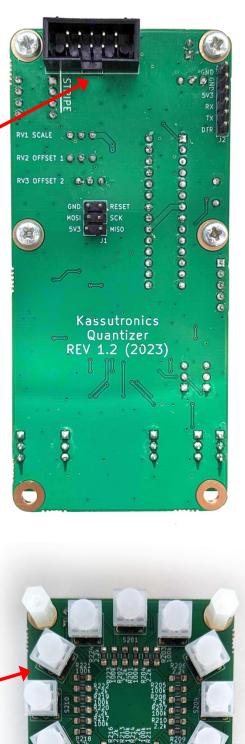

........

R230 2.253 1000 1000

R231

.........

......

