




Phoreo Build Notes

NOTE: This module requires **+5v power** on your busboard to run. There are several solutions to this (if you have a Doepfer case for example) including the Mutable Instruments VOLTS:

<http://www.thonk.co.uk/shop/mutable-instruments-volts-5v-source/>

Doepfer cases show +5v on the busboard, but do not have it fitted as standard!

Note that all components go on the same side of the board EXCEPT the 16 pin Eurorack power header.

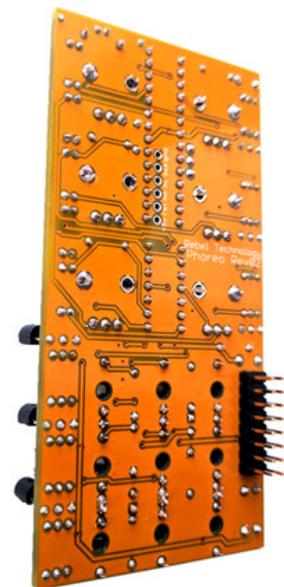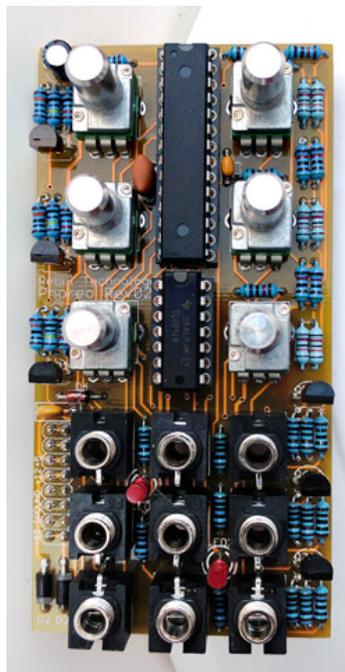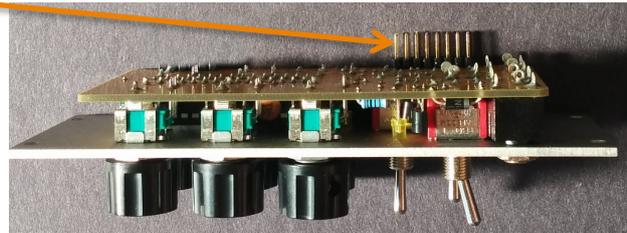

FULL SIZE BUILD PIC:

https://www.thonk.co.uk/documents/rebeltech/phoreo/PHOREO_build.jpg